

In the Drawings:

Drawing figures are revised as follows:

Figure 3 field generator "130" is changed to --301-- (2  
5 places), shell "140" is changed to --300--, and numeral and  
leader "104" are deleted.

Figure 4 field generator "131" is changed to --130-- (2  
places). Magnetic field indicator --132-- and is added.

Figure 4-1 has "n" appended to --156a.--

10 Figure 5 header "106" is changed to --197--.